



These are the specs for the Bar / Kitchen Stool

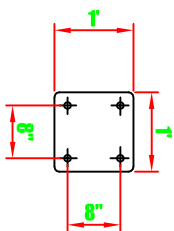


Seat 1.5" to 2.5"

The tenons are 1" and the mortise should be drilled to the center of the legs. The tenons on the seat should be drilled and as deep as possible without coming out the top of the seat. All joints should be glued and screwed.

Look for the video on "The Log Builders Workshop. Com that goes with this plan.

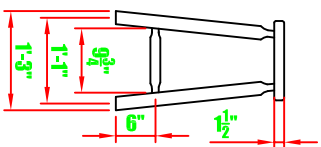

Side View "A"

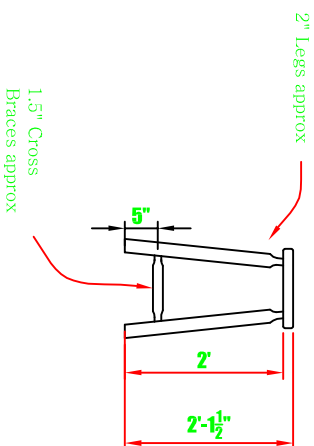

Side View "B"

The Log Builders Workshop .com

Bar / Kichen Stool

Date: 06/2011